

Load Cell for Tunnel Linings & Struts - EHLC-8000

Typically used to monitor stresses in steel linings, struts, piles and support beams



Load Cell for Tunnel Linings & Struts - EHLC-8000

Overview



This consists of a sensitive pressure pad formed by joining two stiff steel discs at their periphery. The void inside the cell is filled with de-aired fluid. When load is applied to the cell the pressure of the inside liquid changes. The changes in pressure correspond directly to the load applied.

The pressure in the loads cell is measured by a resistance transducer.

Mounting surfaces should be flat and parallel for optimum performance and the use of very stiff bearing plates and load distribution plates is recommended. Electric cable connects the load cells to a suitable remote readout system.

This model of load cells is used to monitor stresses in steel linings, struts, piles and support beams.

APPLICATIONS

Measurement of load acting on:

Steel lining in tunnel construction

Struts in big open excavation

Pile testing

FEATURES

Specially designed for steel linings and struts

High strength steel construction

Load distribution plates available

Proven long-term accuracy

Accommodates eccentric loading

Multiple gauge system

Data logger compatible

Available with plug connector or cable



Load Cell for Tunnel Linings & Struts - EHLC-8000

Specifications

LOAD CELL

Measuring range	1,900 & 3,000 kN
Accuracy	>1% FS
Linearity	+/-0.25%FS
Signal output	4-20 mA (current loop)
Cell plate	Sensitised with 16 strain gauges
Repeatability	> +/- 0.02% FS
Admissible loads	150% FS
Ultimate tensile strengths	300% FS
Protection class	IP67
Electrical power supply	8-32V DC
Material	Stainless steel
Operating temperature	-20°C - +80°C
Maximum deflection under load	0.4 mm
Insulation	> 5,000 mΩ
Temperature range	-10°C/+60°C
Temperature effect on sensitivity	(5°C) <± 0.005% FS

CELL PLATE DIMENSIONS


Capacity (kN)	OD (mm)	Height (mm)	Total length inc transducer (mm)
1.900	220	40	360
3.000	270	40	410

LOAD DISTRIBUTION PLATES

1.900	200	30
3.000	250	30

ORDERING INFORMATION

Capacity
Cable length
Readout
Load distribution plate
Connectors

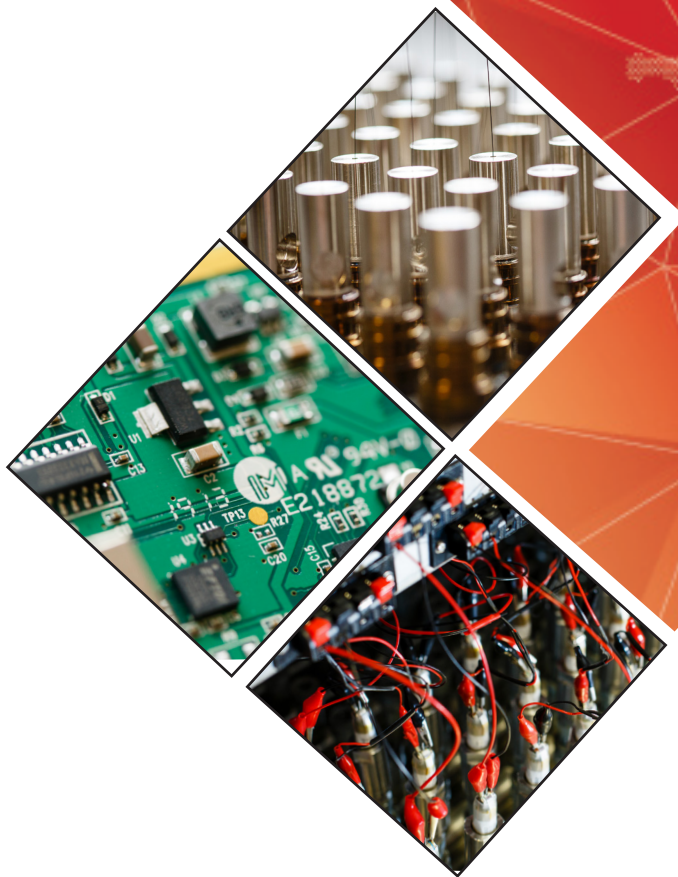

HEAD OFFICE

Nova House
Rougham Industrial Estate
Rougham, Bury St Edmunds
Suffolk IP30 9ND
England

+44 (0)1359 270457
sales@geosense.com
support@geosense.com

NORTH AMERICA OFFICE

15 West 38th Street
Suite 632
New York
NY 10018

+1 518-920-3483
sales@geosense.com
support@geosense.com

www.geosense.com

Specifications are subject to change without notice and should not be construed as a commitment by Geosense. Geosense assumes no responsibility for any errors that may appear in this document. In no event shall Geosense be liable for incidental or consequential damages arising from the use of this document or the systems described in this document. All Content published or distributed by Geosense is made available for the purposes of general information. You are not permitted to publish our content or make any commercial use of our content without our express written consent. This material or any portion of this material may not be reproduced, duplicated, copied, sold, resold, edited, or modified without our express written consent.

V1.3 10/2024